



# Vinyl Roll-UP Manual

## MANUAL OPERATION ~

Heavy duty spring loaded roll tube.  
Minimum width is 54" wide. Maximum width is 14' wide and 14' high. Doors exceeding 10' high will receive fiberglass windbars for added stability. Doors 11' wide and over will require 4" deep Snaptite™ tracks.

## MOUNTING OPTIONS ~

Header Mount, Face of Wall, Stand-Off Bracket Mount. Unit width is critical on all header mounted doors. All Bug Barriers® are manufactured to + or - 1/8" tolerance.

## VINYL ~

22 ounce green vinyl solid panel with clear full width vision panel. Yellow safety stripes cover the windbars for high visibility.

## TRACKS ~

2" wide and 2" Snaptite™ aluminum tracks. Header mount will take up to 3 1/2" of side room on each side. Wall mount will take up to 6" of side room on each side including weatherstripping.

## WEATHERSTRIPPING ~

Grey vinyl weatherstripping is angled to provide a tighter seal preventing bugs and insects easy access or entry.

## RESET SYSTEM ~

Interlocking brush seal is incorporated at the top of the Snaptite™ tracks causing a reset system. Should the door be forced out of the tracks by accidental impact, the door is designed to reset back into the guides.

## HEAD ROOM ~

6" to 7" will be used for header mount application. 8" is needed above the door opening for wall mount application.

## BREAKAWAY FEATURE ~

Unique patented windbars are made of wood wrapped with galvanized steel that remains flexible enough to pop out in case of impact.

## OPTIONAL ~

Fiberglass windbars are available for doors that require added stability.

## CHAIN FALL OPERATION ~

Ability to lift door without spring assistance or a motor.




### Mounting Options (See Page 8 for Stand-Off Mount)

Header Mount  
(Under Lintel)  
(In-Jamb)



Wall Mount  
(Face of Wall)

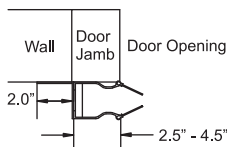

Vision Panel Not Shown